TEAC

Contents

Updates	1
Maintenance items	1 1 1
Procedures for updating the NET CPU/DSP firmware	2
Precautions when updating the firmware	2
Update procedures.	2
Checking the versions	3

Updates

Always use the most recent firmware for this device. Please visit the TEAC International Site (https://teac.jp/int/) to check for the latest firmware.

Maintenance items

NET DSP V1.03

• Support has been added for "https" streaming protocol supported by TuneIn.

NET DSP V1.02

• Support has been updated for changes in TuneIn standards, and the problem of not being able to connect with TuneIn has been fixed.

Procedures for updating the NET CPU/DSP firmware

Use the USB port on the front of the unit.

Precautions when updating the firmware

- Before updating, stop playback and disconnect anything connected to the USB ports.
- While updating, never put the unit into standby mode, or disconnect the power cord or the USB flash drive being used for the update.

Update procedures

1 Connect a USB flash drive to the computer that you are using and delete any files on it.

2 Download the firmware file to the computer from our website.

The firmware file has a name like the following. TC_CRNF004_0000000TA00TJ_***.zip Decompress this file on the computer. The following three files will appear.

TC_CRNF004_0000000TA00TJ.of1 TC_CRNF004_0000000TA00TJ.of2 TC_CRNF004_0000000TA00TJ.of3

• Do not change the names of the decompressed files.

3 Copy the decompressed files to the root folder of the USB flash drive.

Do not copy any files other than the decompressed files. Do not copy the compressed file.

4 Confirm that this unit is on.

5 Connect the USB flash drive with the decompressed files to the USB port on the front of the unit.



- A USB flash drive with at least 32 MB of capacity is necessary for updating the firmware.
- Do not access this unit from a computer during an update.
- Completing the update takes about five minutes.
- Settings must be reset to their default values after updating. (Settings cannot be retained.)

6 Turn the INPUT SELECTOR knob to set the input source to NET.



7 Press the MENU button.



8 Turn the INPUT SELECTOR knob to show NETWORK SETUP.





9 Press the INPUT SELECTOR knob.



10 Turn the INPUT SELECTOR knob to show UPDATE.



11 Press the INPUT SELECTOR knob.

This shows the current NET and DSP versions.



• Updating is not necessary if "NET0102 DSP0103" is shown.

12 Turn the INPUT SELECTOR knob to show F/W UPDATE.

*F∕W UPDATE via USBf

13 Press the INPUT SELECTOR knob.

When the following appears on the display, updating will complete in about five minutes.

• Never put the unit into standby mode, or disconnect the power cord or the USB flash drive being used for the update during an update.

UPDATE START NET F/W UPDATING NET INITIALIZING

```
NET
UNCONNECTED!
```

- 14 After "UNCONNECTED!" appears, disconnect the USB flash drive.
- **15** Shift the POWER switch to its OFF position to turn the unit off.



16 While pressing and holding the MENU button, set the POWER switch to ON.



17 Release the MENU button when the "SETUP CLEAR" message appears.

After "SETUP CLEAR" is shown for a few seconds, the procedure completes when the following startup screens appear.



Checking the versions

Follow procedures 6 to 11 in "Update procedures" and check the current versions.

The version upgrade is complete if "NET0102 DSP0103" is shown.