

Contents

Updates	1
Maintenance items	1
Checking the firmware version.	2
Firmware update procedures	3

Updates

Always use the most recent firmware for this device.

Please visit the TEAC website (<http://audio.teac.com/support/downloads/>) to check for the latest firmware.

Maintenance items

May 2013 fixes


Fixes from version s9267.10051.0 to version s9267.10057.0

- Some CDs with pre-emphasis would have low volume when played back. This has been fixed.
- When turning the unit on again after it had been in standby, the tone settings (BASS and TREBLE) would be changed. This has been fixed.
- The digital input frequency display would occasionally blink during playback. This has been fixed.
- The number of characters used was insufficient for some wireless security types. This has been fixed.
Number of characters that can be used: 63 ASCII
Number of input characters: 64 hexadecimal digits (256-bit)

Checking the firmware version

Check the firmware version of your NP-H750 before starting firmware updating procedures.

- 1 Press the SOURCE button repeatedly to select network mode.**

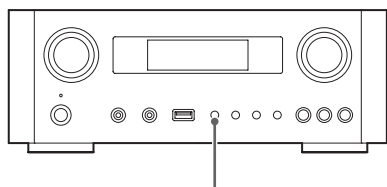


SOURCE



- You can also use the remote control's NET button.


- 2 Press the NET button to select "Internet Radio".**

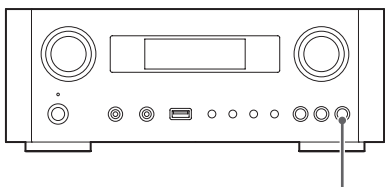

Each time you press the NET button, the source switches between Internet radio and media player.

- You can also use the remote control's NET button.

- 3 Press the MENU button to select "Setup Menu".**

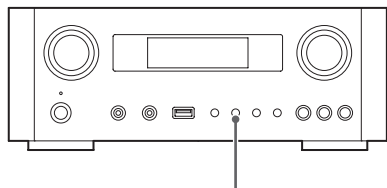


MENU



- 4 Turn the MULTI JOG knob to select "Information", and then press the ENTER button.**


The menu item changes as follows:

Device Name Edit → Net work → Information → Software Update → (Return to) Device Name Edit

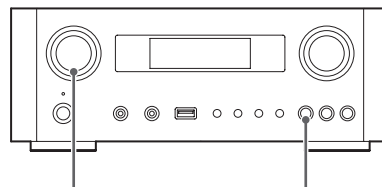

MULTI JOG

ENTER

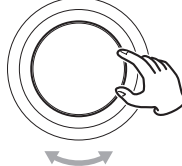

or



- 5 Turn the MULTI JOG knob to select "Firmware Version", and then press the ENTER button.**

The firmware version will appear on the display.


Firmware Version
s9267.10057.0

Firmware update procedures

Copy the "TEAC_NPH750_MCU_BCO_20B0505_S9267_V10057.fw" updater file to an empty USB flash drive in advance.


NOTE Uncompress the downloaded file.

- 1 Press the **SOURCE** button repeatedly to select network mode.

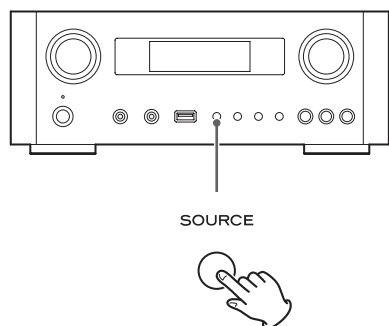

- You can also use the remote control's NET button.


- 2 Press the **NET** button to select "Internet Radio".

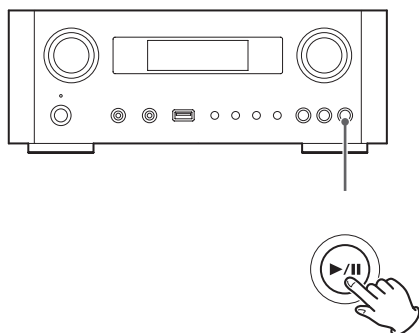

Each time you press the NET button, the source switches between Internet radio and media player.


- You can also use the remote control's NET button.

- 3 Press the **MENU** button to select "Setup Menu".

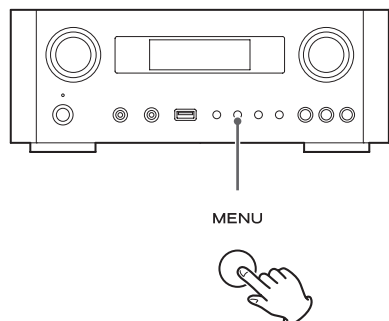

- 4 Turn the **MULTI JOB** knob to select "Software Update", and then press the **ENTER** button.


Device Name Edit → Net work → Information → Software Update → (Return to) Device Name Edit

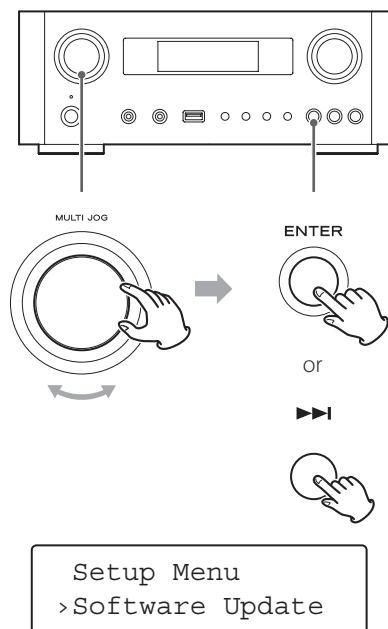

- 5 Turn the **MULTI JOB** knob to select "USB", and then press the **ENTER** button.

"Check USB Memory" will appear on the display.

- 6 Connect the USB flash drive that contains the "TEAC_NPH750_MCU_BCO_20B0505_S9267_V10057.fw" updater file to the USB port in the unit's front panel.

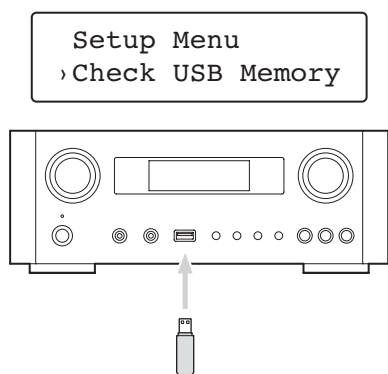

When the firmware update is completed, the unit will restart automatically.

- 7 When the unit has finished restarting, unplug the power cord from the outlet, and turn the unit on again.

You will need to adjust the clock and set the timer again.