TEAC

Please read this manual thoroughly to familiarize yourself with the update procedures before updating the firmware.

Models covered

UD-701N

Supported operating systems

Windows 10 (32/64-bit) Windows11 As of March, 2024

NOTE

In this manual, we refer to the UD-701N as "the unit".

Checking the firmware version

1 Turn the unit on.

2 Press the MENU button to open the menu screen.

3 Turn the SOURCE knob to show the firmware version (VERSION INFO).

Display example



The number shown to the right of "SYSTEM" is the firmware version.

Update procedures

The SOFTWARE maintenance port on the unit is a Micro-B (USB 2.0) port. Use a USB cable that has a Micro-B (USB2.0) connector and a connector that matches the USB port on the computer being used.

• Cables designed only for charging cannot be used for firmware updates. Always use a USB cable that supports data transmission.

NOTE

The screens used in these instructions are from Windows 10.

1 Uncompress the downloaded file.

- The following files will appear.
- Win_DFU_driver.exe
- UD701N_updater_xxxx.exe (xxxx is the firmware version)

2 Double-click Win_DFU_driver.exe, and press the Enter key.

C:\Windows\system32\cmd.exe	—		×
* DFU driver for "Windows10 64bit" will be	installe	:d.	^
Press any key to continue $_$			~

NOTE

If a "User Account Control" pop-up message appears during installation, click "Yes".

3 When the Device Driver Installation Wizard appears, click "Next".

Device Driver Installation Wizard		
	Welcome to the Device Driver Installation Wizard! This wizard helps you install the software drivers that some computers devices need in order to work. To continue, click Next.	
	< Back Next > Cancel	
L		

4 Click "Finish".

Device Driver Installation Wizard			
	Completing the Device Driver Installation Wizard		
	The drivers were successfully in	stalled on this computer.	
You can now connect your device to this computer. If your device came with instructions, please read them first.			
	Driver Name	Status	
	STMicroelectronics (ST	Ready to use	
< <u>B</u> ack Finish Cancel			



 $\begin{array}{c} \text{F/W UPDATE} \\ \Rightarrow \text{SYSTEM UPDATE?} \end{array}$

6 When "F/W UPDATE" appears, turn the SOURCE knob to show SYSTEM UPDATE. Then, press the SOURCE knob.


UPDATE F/W !!

Don't power off!


If the screen shown above does not appear, set the unit's STANDBY/ON switch to STANDBY, and repeat step 5.


7 Use a USB cable to connect the computer to the SOFTWARE maintenance port (Micro-B (USB 2.0) on the back of the unit.

Refer to the unit's operation manual for the location of the maintenance port.

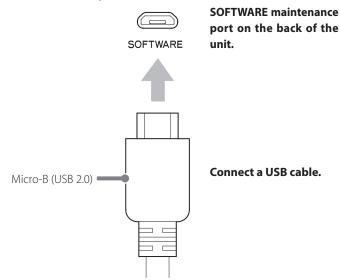

8 Double-click UD701N_updater_xxxx.exe, and click OK.

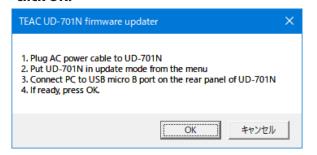

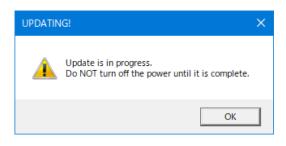

NOTE

The following screen will appear if the unit is not recognized by the computer. Click the \times at the top right of the window to close it.

TEAC UD-701N firmware updater		×
8	Update failed. Please check below and retry. - Is the DFU driver installed? - Is the USB cable connected correctly?	
	(OK]

Check the connection between the computer and the unit, and double-click UD701N_updater_xxxx.exe.

- Cables designed only for charging cannot be used for firmware updates. Use a USB cable that supports data transmission.
- Connecting to a different USB port on the computer might allow it to recognize the unit.

9 When "Update is completed!" appears, click OK to close the window.

TEAC UD-701N firmware updater \times	
Update completed! Unplug USB cable.	
	OK

10 Disconnect the USB cable from the unit.

Disconnecting the USB cable will automatically restart the unit. Follow the procedures in "Checking the firmware version" on the previous page and check the firmware version.

Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Other company names and product names in this document are the trademarks or registered trademarks of their respective owners.